

16MY CAR FIT BT HU Main microcomputer's firmware update

1,Tools

a, set

b,USB which firmware is burned in.



MAIN firmware's name:

ME00008A:	16MY_CD_R_13D2.bin
TE00001A:	16MY_MLESS_R_13D2.bin
ML00001A/MP00002A:	16MY_CD_AE_922D.bin
TL00001A/TP00001A:	16MY_MLESS_AE_922D.bin

USB's burning

You'll update HU, you have to burn the only firmware which named 16MY_CD_R_13D2.bin(For example),in the USB.Otherwise firmware's update will be not successful.

2,Upgrade method

- ①, Copy the .Bin file to the USB memory.
※Please make sure there is no other file except the upgrade file in the USB memory.
- ②, Connect the HU to the power, then power on the HU.
- ③, Change to USB source, insert the USB memory to the USB connector.
- ④ Press the two key BAND and Preset3 at the same time, then press the PLAY/ PAUSE button.
- ⑤, 「UPDATE_YES/UPDATE_NO」 will display on the LCD, turn the Encoder to select YES or NO. Please select YES. then push the Encoder button to start the upgrade.
- ⑥, 「UPD_START」 will display and 「UPD_ _ _ XX%」 will display later.
- ⑦, If upgrade successfully, 「UPDATED」 will display on the LCD for 5 seconds and show "M_922D0C11Z" (which it means you can use the HU normally after ACC off/on)
- ⑧, If 「UPD_FAIL」 display, You should repeat the step1 to step7.